
Trim / Mechanical clamp


UNFOLD FULLY TO READ

01 Fit the mounting frame

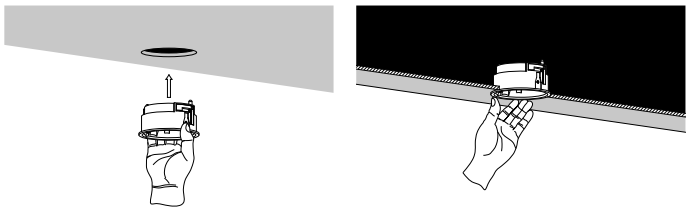

Isolate the mains supply. Prepare the model-specific opening. Insert the frame and hold it flush. Check ceiling thickness against the technical drawing.


02 Open the clamps

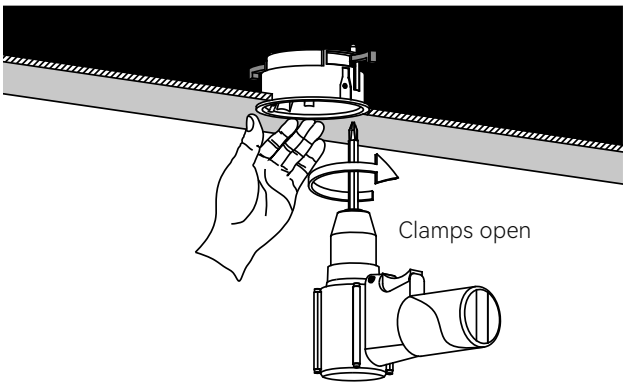

Turn clockwise

Turn both fixing screws clockwise to swing out the clamps.


03 Secure the frame

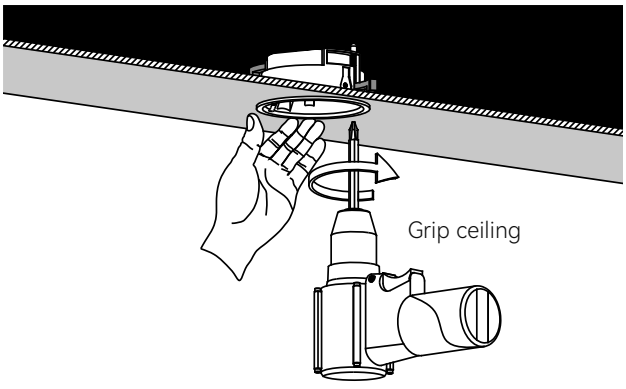

Continue tightening

Continue tightening until both clamps grip the ceiling.

04 Connect and fit the luminaire

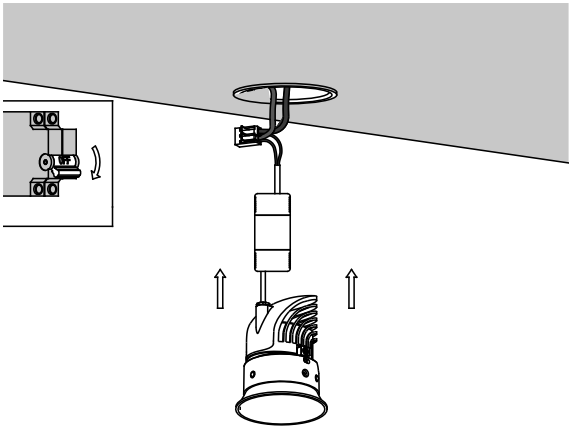

Keep power isolated. Connect the driver, place it above the ceiling and push the body into the frame until it clicks.


POWER OFF before any work.

Electrical work: qualified electrician only.

Trimless installation


UNFOLD FULLY TO READ

01 Prepare the recessed opening

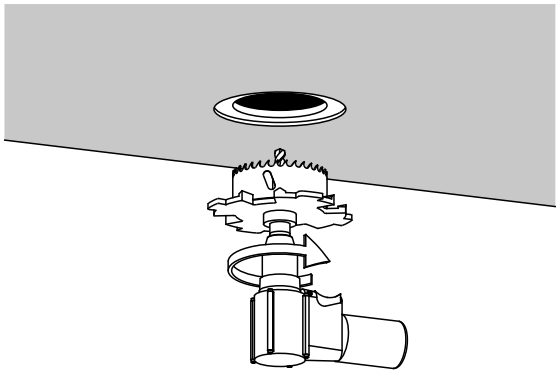


Use the stepped cutter specified for the model; check the current technical drawing.

02 Fix the mounting frame

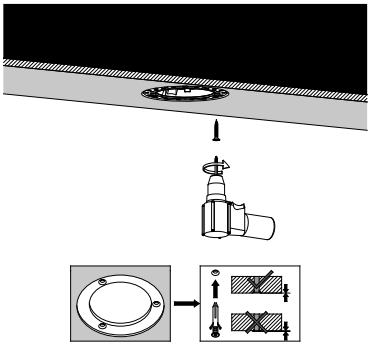


Insert the frame and secure it with the three screws shown.

03 Finish the ceiling

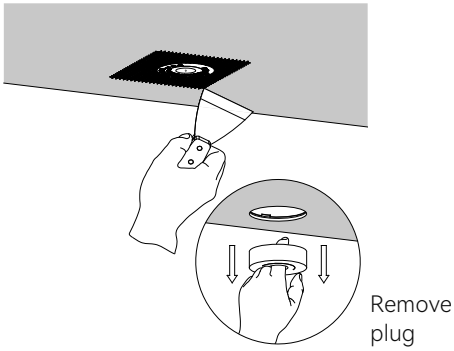

Fit the protective plug, apply mesh and filler, then sand and paint. Remove the plug and clean the opening.

04 Connect and fit the luminaire

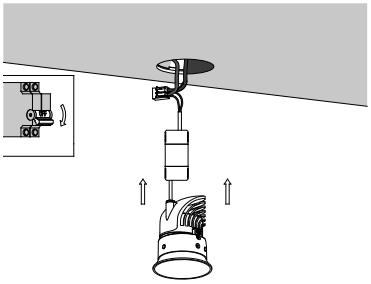

Keep power isolated. Connect the driver and push the luminaire into the frame until it clicks; check that it sits flush.

POWER OFF before any work.

Electrical work: qualified electrician only.