
Trim installation


UNFOLD FULLY TO READ

01 Separate the frame

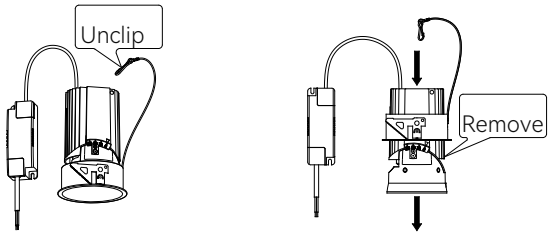


Release the safety clip and separate the luminaire body from the frame.

02 Prepare the opening

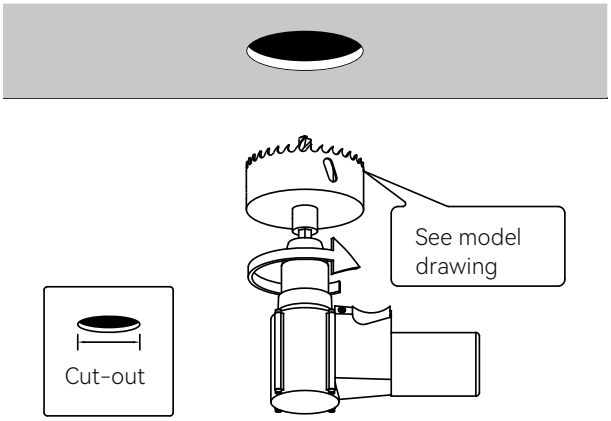


Prepare the opening specified for the supplied model. Check cut-out size, ceiling thickness and clearance in its technical drawing.

03 Insert and seat the frame

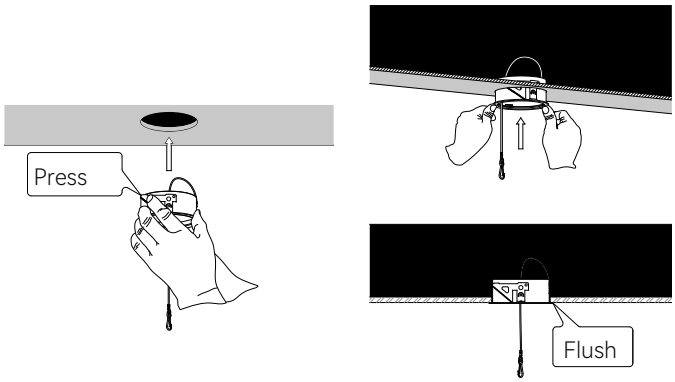

Press both spring clips inward. Insert the frame and push it fully flush with the ceiling.

04 Connect and fit

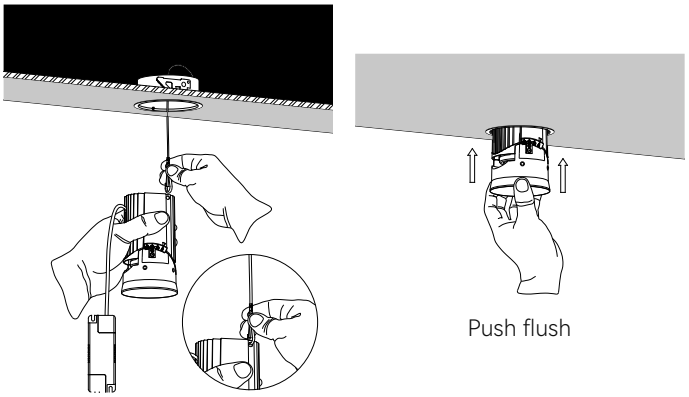

Attach the safety cable. With power isolated, connect the driver and place it above the ceiling. Push the luminaire into the frame until it sits flush.


POWER OFF before any work.

Electrical work: qualified electrician only.

Trimless installation


UNFOLD FULLY TO READ

01 Prepare and fix the frame

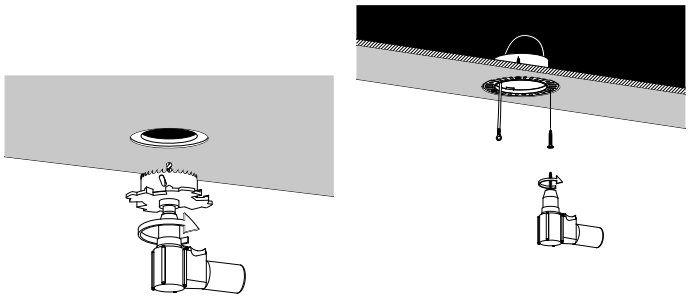


Use the model-specific stepped opening. Insert the mounting frame and secure it with the three screws shown.

02 Finish the ceiling

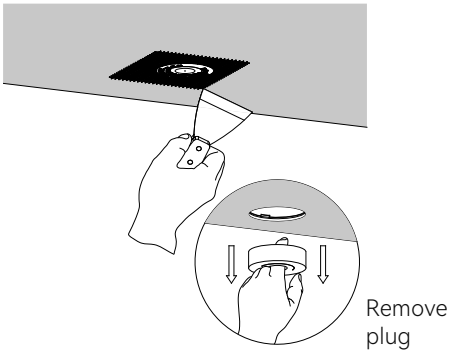


Fit the protective plug, apply mesh and filler, then sand and paint. Remove the plug and clean the opening.

03 Attach the safety cable

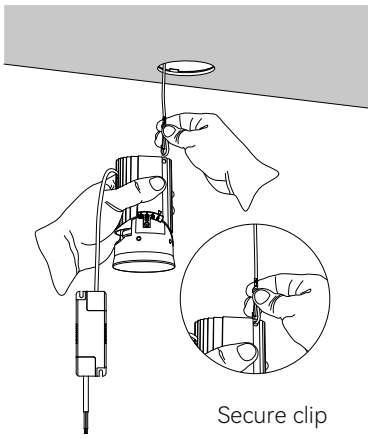

Clip the cable to the luminaire and check that it is secure.

04 Connect and fit

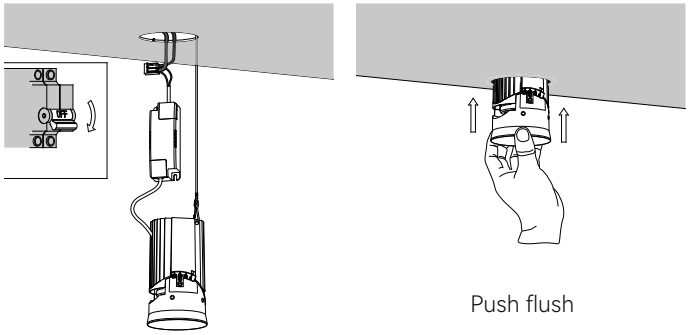

Keep power isolated. Have a qualified electrician connect the driver. Place it above the ceiling, push the luminaire in and check that it sits flush.

POWER OFF before any work.

Electrical work: qualified electrician only.