
Trim installation


UNFOLD FULLY TO READ

01 Insert the spring clips

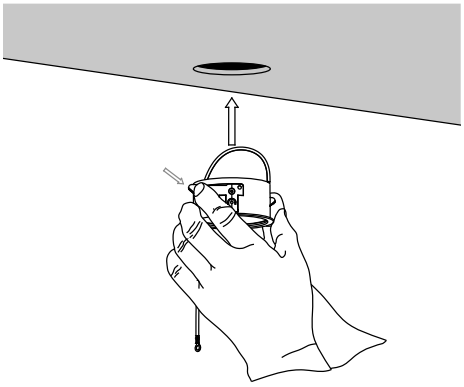


Press both clips inward and insert the frame about one-third into the opening.

02 Seat and lock the frame

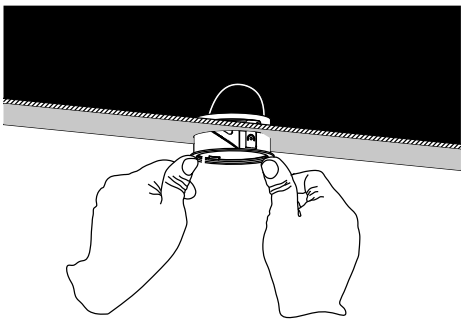


Push the frame flush. Turn gently clockwise to level it, then counterclockwise to lock the spring teeth.

03 Attach the safety cable

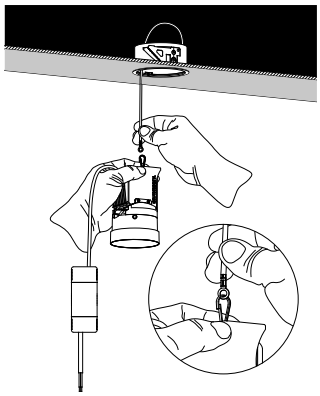

Clip the frame safety cable to the luminaire and check that it is secure.

04 Connect and fit the luminaire

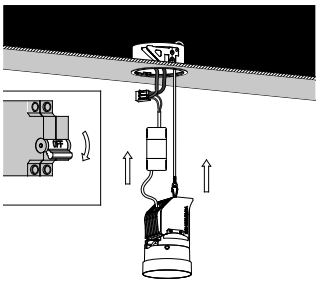

Keep power isolated. Connect and position the driver, then push the luminaire into the frame until it clicks.


POWER OFF before any work.

Electrical work: qualified electrician only.

Trimless installation


UNFOLD FULLY TO READ

01 Prepare and fix the frame

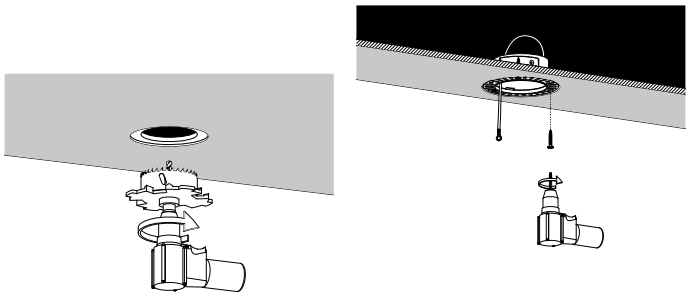


Use the model-specific stepped opening. Insert the mounting frame and secure it with the three screws shown.

02 Finish the ceiling

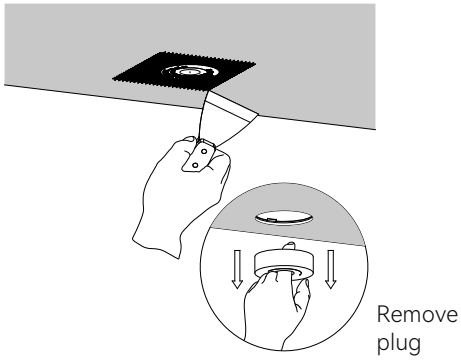


Fit the protective plug, apply mesh and filler, then sand and paint. Remove the plug and clean the opening.

03 Attach the safety cable

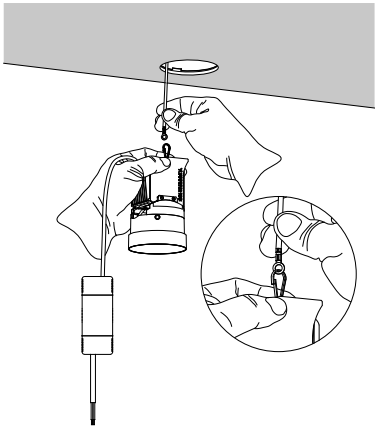

Clip the frame safety cable to the luminaire and check that it is secure.

04 Connect and fit

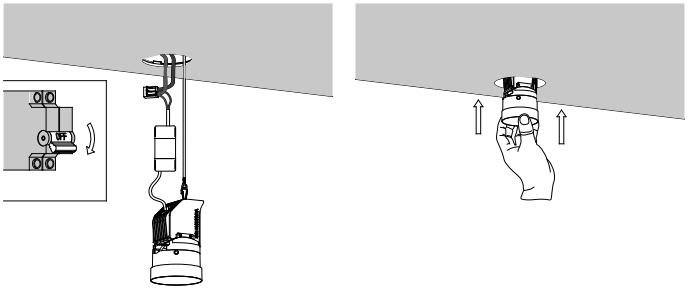

Keep power isolated. Have a qualified electrician connect the driver. Place it above the ceiling, push the luminaire in and check that it sits flush.

POWER OFF before any work.

Electrical work: qualified electrician only.